

# Owners Manual

## HazCam™ Entry Camera

6-18-04

PRODUCT NAME            900MHZ HazCam™ WIRELESS  
**CAMERA SYSTEM**

**FACTS ABOUT WIRELESS VIDEO SYSTEM**

1. UNLIKE AUDIO SIGNALS (20-20KHZ), VIDEO COMPOSITE SIGNAL TRANSMISSIONS REQUIRE AT LEAST 20MHZ BANDWIDTH TO BE ABLE TO DISPLAY THE ENTIRE VIDEO SIGNAL AND CAPTURE SYNC.
2. STABILITY OF THE SIGNAL IS BASED MORE ON THE LINE-OF-SIGHT BETWEEN TRANSMITTER AND RECEIVER ANTENNAS, THIS IS A PREREQUISITE FOR THE GOOD RECEPTION OF VIDEO SIGNALS. A GOOD SIGNAL CAN BE INTERRUPTED WHEN THE TRANSMITTER/CAMERA IS IN MOTION AND BY OFF-THE-AIR INTERFERENCES. SIGNAL RECEPTION IS OPTIMIZED IF THE TRANSMITTER ANTENNA IS BEING SEEN BY THE RECEIVER ANTENNA, NAMELY, LINE-OF-SIGHT.

INSIDE THE CARRYING CASE IS THE COMPLETE HazCam™ SYSTEM.

WE HAVE PROVIDED YOU WITH A PANEL ANTENNA MOUNTED INSIDE THE TOP COVER OF THE CARRYING CASE. TO OPTIMIZE YOUR VIDEO RECEPTION, ALWAYS POSITION THE FLAT SIDE OF THE COVER TO FACE THE CAMERA/TRANSMITTER.

WHEN NOT IN OPERATION, YOU CAN STORE THE CAMERA IN THE LEFT SLOT OF THE CARRYING CASE. WHEN THE BATTERY NEEDS RECHARGING, CONNECT THE CAMERA CHARGER TO THE BOTTOM REAR SOCKET OF THE CAMERA AND PLUG THE ADAPTOR INTO A CONVENIENT AC OUTLET. IT IS ADVISABLE TO TURN OFF THE LED/PUSH BUTTON SWITCH WHEN CHARGING THE BATTERY.

NORMAL CHARGING TIME FOR THE CAMERA/TRANSMITTER IS ABOUT 5 HOURS.

THE RECEIVER BATTERY IS MOUNTED INSIDE THE CARRYING CASE AND SHOULD NOT BE REMOVED UNLESS BATTERY REPLACEMENT IS REQUIRED. TO CHARGE THE RECEIVER/MONITOR BATTERY, JUST PLUG THE ADAPTOR SUPPLIED TO THE CHARGER BOX AND TURN ON THE CHARGER SWITCH. NORMAL CHARGING TIME FOR THIS BATTERY IS ABOUT 5 TO 6 HOURS.

SHOULD YOU NEED FURTHER ASSISTANCE, PLEASE CALL:


**CUSTOMER SUPPORT AT:            (408) 748-1100**

## COP VIEW EQUIPMENT LIST

PRODUCT NAME 900MHZ HazCam™ WIRELESS CAMERA SYSTEM EQUIPMENT

AND ACCESSORIES INCLUDED IN THE HIGH IMPACT CARRYING CASE

1. HIGH RESOLUTION BLACK AND WHITE CAMERA
2. WATERPROOF CAMERA/TRANSMITTER OUTDOOR CASING
3. 900 MHZ TRANSMITTER
4. CAMERA/TRANSMITTER BATTERY PACK
5. DEDICATED CAMERA/TRANSMITTER AC/DC CHARGER
6. LCD COLOR MONITOR
7. 900 MHZ RECEIVER
8. HIGH GAIN PANEL ANTENNA
9. RECEIVER/MONITOR DRY RECHARGEABLE BATTERY PACK
10. CHARGER SWITCH MODULE
11. DEDICATED RECEIVER/MONITOR AC/DC CHARGER

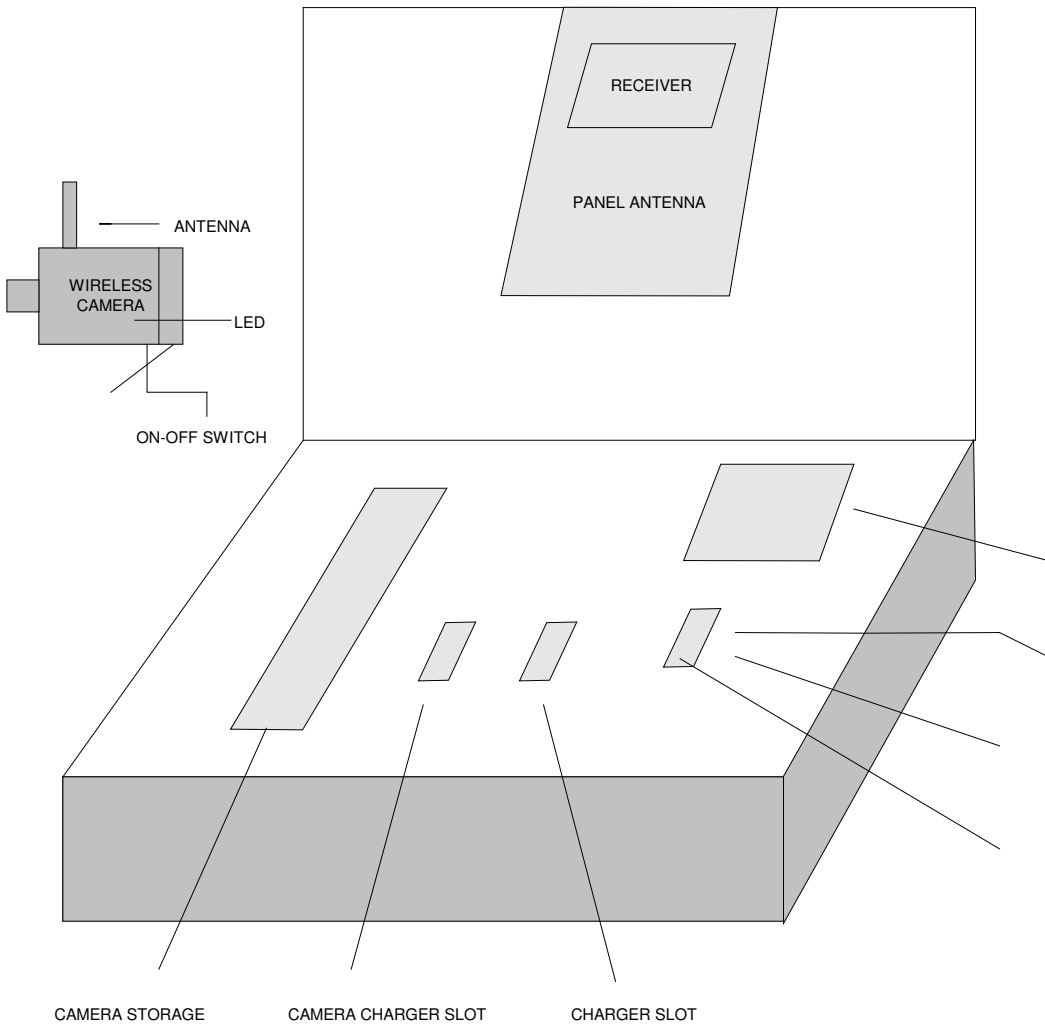

- To prevent fire or shock hazard, do not expose this product to rain, moisture or continuous high humidity. Do not use near a bathtub, washbowl, sink, laundry tub or in a wet basement or around a swimming pool.
- To avoid electrical shock, do not open the case of this product, its power supply or accessories.
- Operate this product using only the power supply included with the unit or as an accessory.
- Do not overload electrical outlets or extension cords as this can result in electrical shock or fire.
- Refer servicing of this product, its power supply(s) and accessories to qualified personnel only.
- In order to protect your investment in equipment and programming, we strongly recommend the use of a professionally installed surge protector and power conditioner for all Alternating Current (AC) that powers Pragmatic products and any component connected to it.

DISCLAIMER: This product is designed for lawful use as a system transmitting video signals from one location over wire, fiber, Internet Protocol, wireless transmission and other media in the home or office to another location. Pragmatic, Inc. hereby advises the End User to consult with local officials and other authorities regarding the proper use of this product in compliance with all local, State and Federal laws. Changes or modifications not expressly approved by the Party responsible for compliance could void the End Users' authority to operate the equipment. Pragmatic, Inc. shall not be responsible for any misuse of this product by any individual or entity under any circumstances.

WARRANTY: Pragmatic Inc. warrants this product against defects in materials or workmanship for a period of six (6) months from the date of purchase by the End User. During this warranty period, this product will be repaired or replaced at Pragmatic, Inc.'s option at no charge,

Please read these instructions carefully and use this product only as directed. This warranty does not cover any damage due to accident, misuse, abuse or negligence. This warrant is valid only in the United States of America.

Repair or replacement as provided under this warranty is the exclusive remedy of the End User. Pragmatic, Inc. shall not be responsible for any incidental or consequential damages for breach of any expressed or implied warranty on this product, except to the extent prohibited by applicable law. Any implied warranty of merchantability or fitness for a particular purpose on this product is limited to the duration of this warranty.

For more information, visit: [www.wireless-experts.com](http://www.wireless-experts.com) or for technical support, contact us at:

PRAGMATIC, INC., 2340A Walsh Avenue, Santa Clara CA 95051, Tel: (408) 748-1100, Fax: (408) 663-9783

---